

 
Global Positioning System (GPS) A Step by Step Guide

1. Turn on the GPS




Power button on side of unit.

2. On Home Screen tap the “Where To?” icon

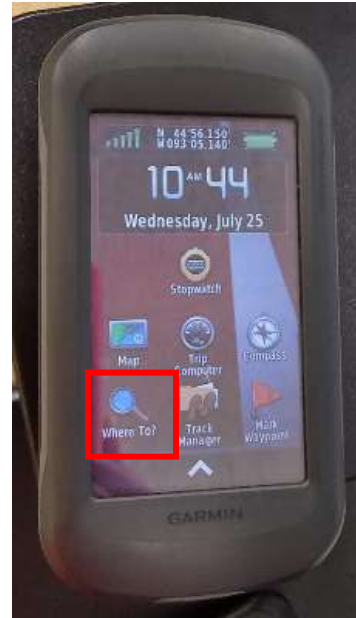


3. Tap the Coordinates icon

- a. **Note:** you may have to use the arrows to scroll up or down if it doesn't appear at first.

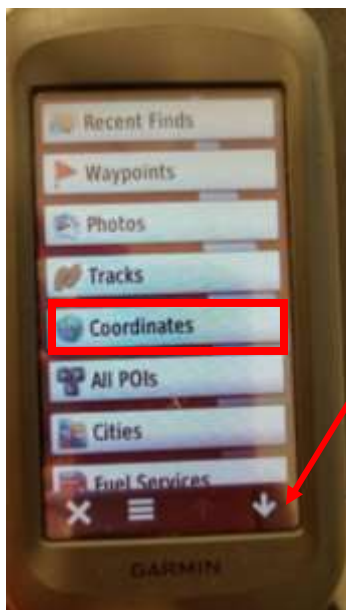

4. Enter your new coordinates

- Current coordinates will appear and the device will ask you to enter the coordinates of where you want to go.
- To update the coordinates, use the right and left arrows to move the cursor/highlighted digit. The highlighted digit is the current number you can edit.
- Once the highlighter is on the number you wish to change tap the new number to edit.

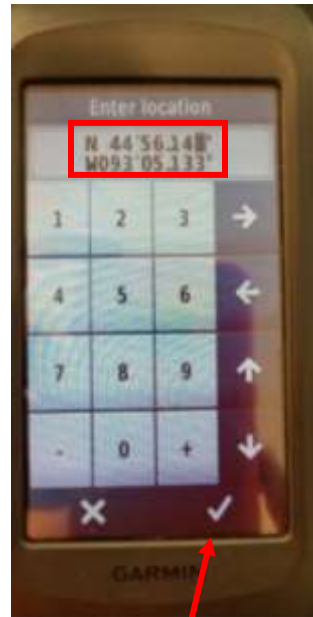

5. Confirm your coordinates

- Confirm your newly entered coordinates.
- When done, click the check mark icon at the bottom right of the screen.
- Note:** if a pop-up occurs, simply click 'Okay'.

6. Finding your new coordinates

- After entering your new coordinates, a map will appear.
- You may need to zoom in or out using the plus and minus buttons at the bottom of the screen.
- Your new coordinates are marked with a blue pin

Note: Remember the GPS only works if you are moving. Keep your group moving in the direction you think the cache is.

Note: These GPS units can be inaccurate up to 75 feet in any circular direction. Make sure your group knows this. Once you think you're in the vicinity, physically look for the cache. It will not always be exactly where the GPS tells you it is and that is part of the fun of finding these caches!

